

Trouble Event Number	Trouble Event Description	Device or Module Number	Trouble Text Description #1	Trouble Text Description #2
F48-Panel #	Panel Phone Line Fail	P001	rEPDrt	FRIL
F49-Panel #	Panel Service Mode	P001	INStRL	OnSttE
F50-Panel #	Panel Eprom Fail	P001	dRtR	ErrDr
F51-Panel #	Panel Comm+ Overload	P001	DUt 12	LEuEL
F52-Panel #	Panel LAN Overload	P001	LRn 12	LEuEL
F53-Panel #	Panel ACC Overload	P001	Rcc 12	LEuEL
F54-Panel #	Panel - TCP IP Comm Fail	P001	IP PDL	FRIL 1
F55-Panel #	Panel - TCP IP Comm Fail	P001	IP PDL	FRIL 2
F60-RTC #	RTC Module Missing	CL001	LDSt	
F61-RTC #	RTC Module Tamper	CL001	cRSE	DPEn
F62-RTC #	RTC Module Low Battery	CL001	bRttrY	LEuEL
F63-RTC #	RTC Module Missing Battery	CL001	nD	bRttrY
F64-RTC #	RTC Clock Error	rtC001	cLDc	Error
F70-Receiver #	RF Receiver Missing	rF001	LDSt	
F71-Receiver #	RF Receiver Tamper	rF001	cRSE	DPEn
F72-Receiver #	RF Receiver Jam	rF001	Si gNRL	Hi gH
F80-Power Supply #	P/S Module Missing	PS001	LDSt	
F81-Power Supply #	P/S Module Tamper	PS001	cRSE	DPEn
F82-Power Supply #	P/S Module AC Fail	PS001	nD AC	
F83-Power Supply #	P/S Module Low Battery	PS001	bRttrY	LEuEL
F84-Power Supply #	P/S Module Battery Missing	PS001	nD	bRttrY
F85-Power Supply #	P/S Module Output Overload	PS001	DUt 12	ShDrE
F88-Output Module #	Output Module Expander Missing	OE001	LDSt	
F89-Output Module #	Output Module Expander Tamper	OE001	cRSE	DPEn
F90-Keypad #	Keypad Missing	CP00x	LDSt	
F91-Keypad #	Keypad Tamper	CP00x	cRSE	DPEn
F91-Reader #	LAN Reader Tamper	LP00x	cRSE	DPEn
F92-Keypad #	Keypad High Temperature	CP00x	tDD	HQt
F93-Keypad #	Keypad Low Temperature	CP00x	tDD	CDLd
F100-Module #	Ethernet Module Missing	Et001	LDSt	
F101-Module #	Ethernet Module IP Changed	Et001	IP	chRnGE
F102-Module #	Ethernet Module No Connection	Et001	nD	cRbLE
F103-Module #	Ethernet Module IP Lockout	Et001	LDch	DUt
F104-Module #	Ethernet Module IP Conflict	Et001	IP	USEd

Table 24: System Trouble / Fault Descriptions